





**INSTRUCTIONS FOR RESETTING THE CARTRIDGE AFTER REFILLING**

**TN2000/TN350 COMPATIBILITY:** DCP 7010, DCP 7010L, DCP 7020, DCP 7025, HL 2020, HL 2030/2030B, 2040, 2050, 2070, FAX 2825, IntelliFax 2820, 2920, 2910, MFC 7225N, MFC 7420, MFC 7820.

Brother has introduced a small plastic gear in its cartridges tells the printer that a new cartridge is installed. You will need to reset the gear in order to reset the cartridge. Follow instructions below.

\*Please note that the starter cartridges (ship with new printers) do not always have this gear included. You can purchase the flag gear online at [www.zinetic.co.uk](http://www.zinetic.co.uk) if you do not have the gear.

<p><b>1.</b> Remove the 3 screws as shown opposite. The White gear is shown in the "unset" position.</p>	
<p><b>2</b> You will now have the end plate section and gear. (If no gear is present, you have a starter cartridge – you will need to purchase a gear).</p> <p><b>3</b> Install and reset the flag gear by rotating it as shown</p>	 
<p><b>4</b> With the gear set in the correct position, re-install the gear cover plate and replace the three screws as shown opposite.</p>	

Zinetic is not associated with or endorsed by any of the cartridge / printer manufacturers referred to in any of our published works. Names of manufacturers, machines and part numbers are given as an aid to identification only. Names of manufacturers, machines and part numbers may be trade marks of the respective manufacturer. All Trade Marks hereby expressly acknowledged.